


STEAM RADIATOR ADJUSTMENT

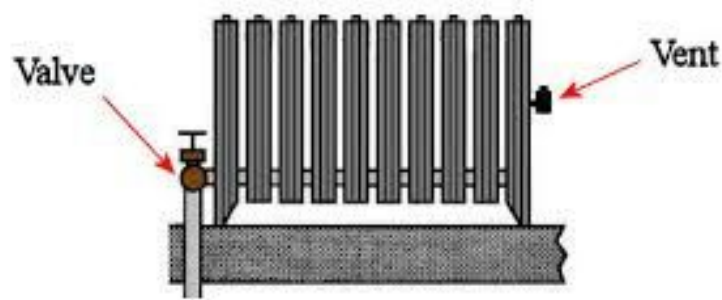

If your room is too hot, and you want it to receive **LESS HEAT** than the rest of the house, you should adjust the steam vent, located on the side of the radiator about half way up, it will look like one of these:



Most of these vents have an adjustment, with the slide tab shown left or the dial shown right. Adjusting these will vary the amount of steam getting to the radiator and thus limit the heat output.

Please note, you should never close the large steam valve at the base of the radiator. Doing this will trap moisture in the radiators and cause them to leak water all over the floor. The valves look like the images below, and should be left fully open at all times.

